

USER MANUAL
REVOLVER R-12
12-INCH MONO VOICE COIL



CAOS
UNLIMITED 
www.caosunlimited.com

1
Year Warranty



PRODUCT INFORMATIONS

GENERAL SPECIFICATIONS


Nominal Diameter: 12 inch
 Rated Impedance: 2*4 ohms
 Operating Bandwidth: 30HZ–3800HZ
 Power Handling Capacity: 3000 W(Max)
 Sensitivity : 93 dB
 Voice Coil Diameter: 2.5 inch

THIELE-SMALL PARAMETERS

Resonance Frequency Fs: 40.7 HZ
 DC Resistance Re: 2*3.4 ohm
 Mechanical Q Factor Qms: 2,1
 Electrical Q Factor Qes: 0,3808
 Total Q Factor Qts: 0,3223
 Equivalent Cas air load Vas: 38.34L

PHYSICAL INFORMATIONS

Basket: Cast Aluminium
 Magnet Type: 50+50+50 OZ
 Cone Material: PP
 Surround: Rubber
 Dust Cap: PP
 Damper: Canvas
 Packing Quantity: 1

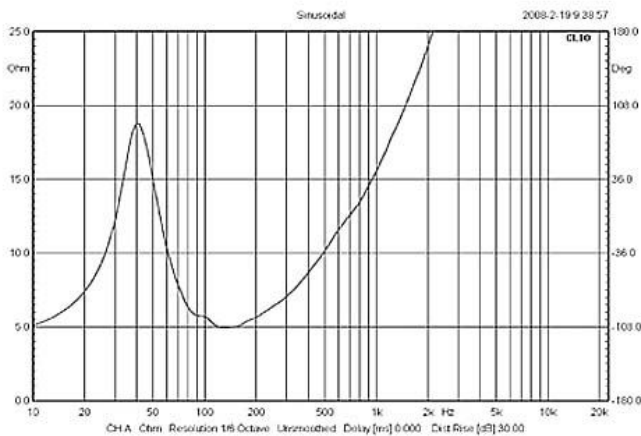

It is difficult to give exact box dimensions that are universal for all cars and trucks. It is for this reason that you must be able to calculate the space in which you have available in order to achieve the proper air volume required.

It is recommended to build your enclosure from 3/4" thick MDF (medium density fiberboard). Make sure the enclosure is sealed air tight.

CALCULATING EXTERNAL VOLUME

1)To calculate box volume, measure the outside Width x Height x Depth of the enclosure.
 Example 13" x 15" x 10" = 1950"

2)next you must convert cubic inches into cubic feet. To do this, you must divide the cubic inch total by 1728".
 Example 1950 : 1728 = 1.128 Cubic feet

CALCULATING INTERNAL VOLUME

1)To calculate the internal (net) volume of the above box you must first multiply the thickness of the wood you are using by Two (2).
 Example 3/4" x 2" = 1.5"

2)Next Subtract 1.5 from each of the outside measurements of the box.
 Width 13 - 1.5 = 11.5
 Height 15 - 1.5 = 13.5
 Depth 10 - 1.5 = 8.5

3)Multiply the new totals (H x W x D)
 Example 11.5 x 13.5 x 8.5 = 1319.625

4)Next you must convert cubic inches into cubic feet. To do this, you must divide the cubic inch total by 1728"
 Example 1319.625 : 1728 = 0.7637 Cubic feet